

Portable Oxygen Monitor  
**OX-07**  
(Type B)  
<No Gas alarm type>  
**Operating Manual**

**Request for the Customers**

- Read and understand this operating manual before using this gas monitor.
- Use it in accordance with this operating manual.
- Regardless of warranty period, we shall not make any indemnification for accidents and damage caused by using this gas monitor.  
Make sure to read the warranty policy specified on the warranty.
- Because this is a safety unit, a regular maintenance for every six months and daily maintenance must be performed.
- If any abnormality is found in the gas monitor, notify it to RIKEN KEIKI immediately.  
(Visit our Web site to find your nearest RIKEN KEIKI office.)

**RIKEN KEIKI Co., Ltd.**

**2-7-6 Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan**

Phone : +81-3-3966-1113

Fax : +81-3-3558-9110

E-mail : [intdept@rikenkeiki.co.jp](mailto:intdept@rikenkeiki.co.jp)

Web site : <http://www.rikenkeiki.co.jp/>

## Safety information

The Portable Oxygen Monitor Model OX-07 is a monitor designed to provide continuous exposure monitoring of Oxygen(O<sub>2</sub>) in hazardous environments.

### Specification for safety

- Ex ia II C T4 Ga
-  II 1 G Ex ia II C T4 Ga
- Ambient temperature range for use : -20°C to +50°C

### Electrical data

- Powered by two AA size Alkaline batteries,  
model LR-6 by Toshiba.

### Certificate numbers

- IECEx Certificate number : IECExKEM08.0022
- ATEX Certificate number : KEMA08ATEX0126

### List of standards

- |                     |                   |
|---------------------|-------------------|
| • IEC 60079-0:2011  | • EN60079-0:2012  |
| • IEC 60079-11:2011 | • EN60079-11:2012 |
| • IEC 60079-26:2006 | • EN60079-26:2007 |

### WARNING

- Do not replace batteries in hazardous location.
- Do not replace O<sub>2</sub> sensor in hazardous location.
- Do not replace Extension Cable in hazardous location.
- Do not attempt to disassemble or alter the instrument.

INST. No. ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○  
          A  B    C          D          E

- A: Manufacturing year (0-9)
- B: Manufacturing month (1-9,XYZ for Oct.-Dec.)
- C: Manufacturing lot
- D: Serial number
- E: Code of factory



**RIKEN KEIKI Co., Ltd.**  
2-7-6 Azusawa, Itabashi-Ku, Tokyo, 174-8744, Japan  
Phone : +81-3-3966-1113  
Fax : +81-3-3668-9110 ext  
E-mail : [intdept@rikenkeiki.co.jp](mailto:intdept@rikenkeiki.co.jp)  
Web site : <http://www.rikenkeiki.co.jp>

## INTRODUCTION

Using an advanced microprocessor controlled detection system, the OX-07 Oxygen Monitor detects the Oxygen (O<sub>2</sub>) content to prevent the accident caused by oxygen deficiency. Take care about decreasing oxygen condition since this unit (Type B version) does not provide gas alarm function.

This manual is a guide to operation of the OX-07. Reading of this manual is requested not only for first user but also for experienced staff.

### This manual contains the following headings to ensure safe and effective operation.



Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury or serious damage to the product.

This signal word is to be limited to the most extreme situation.



Indicates a potentially hazardous situation which, if not avoided, could result serious injury to the human body or object.



Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or some damage to the human body or objects. It may also be used to alert against unsafe practices.



This means “ADVICE” regarding operation.

## Cautions for the safety

### **WARNING**

- Perform gas calibration at proper interval.
- Do not use unspecified batteries.
- Check battery capacity before operation.
- Ensure that sensor is exposed to ambient air. If not, correct detection cannot be performed.
- If the button is pushed randomly, each setting may be changed and alarm may not be activated correctly. Do not operate the button other than as per instructions.
- Do not drop this monitor into fire.
- Do not remodel or alter circuit, structures etc.
- Do not disassemble the sensor since there is an electrolyte inside. If your finger touches the electrolyte, wash your finger with water immediately.

### **CAUTION**

- Do not push sensor and buzzer window with pointed article.  
This may cause defect or damage and correct detection cannot be performed.
- Do not pour water on this monitor or immerse in water.
- Do not give high impact or shock, since this is precision instrument.
- Operating temperature range of this monitor is  $-20$  to  $+50$  degreeC. The reading may be affected by the sudden change of temperature if the monitor is used under such conditions.
- Remove the battery if the monitor is not used for a long period.

## Cautions relating to explosion proof

### **WARNING**

- Do not remodel or alter circuit/structures.
- Replace batteries in non-hazardous area.
- Do not use this monitor except for the measurement of air and for oxygen content measurement of gas mixtures.

## Table of contents

1. DESIGNATION .....	4
2. PREPARATION	
2-1. Mounting/Replacing the batteries.....	6
2-2. Mounting/Replacing the sensor .....	7
2-3. Power ON/OFF .....	8
3. OPERATION	
3-1. Start up procedure .....	9
3-2. Performing a fresh air adjustment .....	9
3-3. Changing the display in measuring mode .....	10
3-4. Wearing the unit .....	12
4. ALARMS	
4-1. Trouble alarms .....	14
4-2. Responding to dead battery alarm.....	14
4-3. Resetting alarms .....	15
4-4. Examples of other LCD indications .....	15
4-5. Responding to low oxygen content .....	15
5. MAINTENANCE AND CHECK	
5-1. Daily check .....	16
5-2. Air calibration .....	16
5-3. Battery replacement .....	16
5-4. Gas calibration .....	16
6. SCRAP THE PRODUCT .....	16
7. TROUBLE SHOOTING .....	17
8. SPECIFICATIONS	
8-1. Specifications .....	18
8-2. Standard accessories .....	18
8-3. Optional accessories .....	19
9. DEFINITION OF TERMS .....	20
10. DETECTION PRINCIPLE .....	21

# 1. DESIGNATION

## [Front view]




- 1. LCD display : Indicates gas detection results and various information.
- 2. Air button : Adjusts readings when a fresh air adjustment is performed. Changes a parameter setting when a parameter is available for adjustment in display mode or setup mode.
- 3. Target gas window : Window to see the target gas described by the sensor.
- 4. Alarm light : Flashes when the unit reaches warning conditions.
- 5. POWER button : Turns the unit on and off. Determines a parameter in setup mode.
- 6. DISP button : Enters setup mode. Changes a parameter setting in setup mode.
- 7. Buzzer : Sounds for unit malfunctions and dead battery alarm.

## [Rear view]




## [Bottom view]

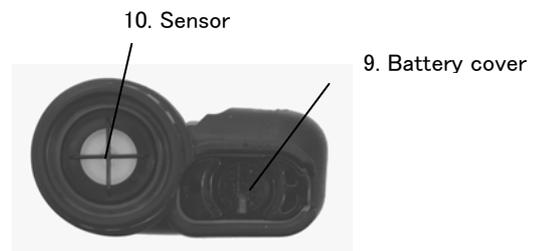

- 8. Threaded holes : These are used to mount the alligator clip or the optional belt clip.
- 9. Battery cover : The cover for battery compartment.
- 10. Sensor : Oxygen sensor is mounted here.

**[LCD display]**

– Measuring mode –

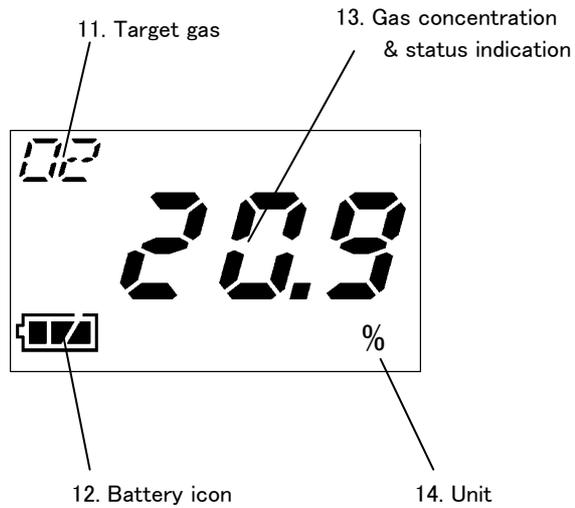


- 11. Target gas :            Displays the name of target gas.
- 12. Battery icon :        Shows remaining battery life.
- 13. Gas concentration :   The target gas concentration and the status of this unit is  
                                 & status indication    displayed.
- 14. Unit :                    Indicates the unit of gas concentration.

## 2. PREPARATION

### 2-1. Mounting/Replacing the batteries

- 1) Verify that the unit is off.
- 2) Rotate the fastener in the battery cover a quarter turn counterclockwise and lift up the end of the battery cover to remove it. A coin may be used to rotate the fastener.
- 3) Carefully install the new AA alkaline batteries. Follow the battery diaphragm inside the battery compartment.
- 4) Reinstall the battery cover.

[Opening the battery cover]

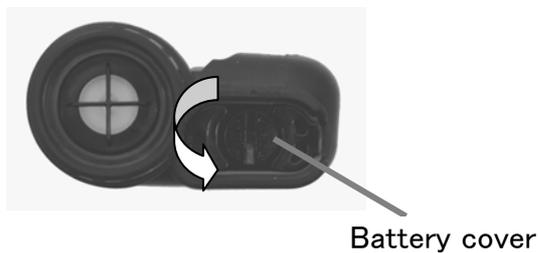

[Direction of battery mounting]



[Closing the battery cover]



AA size alkaline batteries



**WARNING**

Do not remove the battery with power on.  
Battery replacement shall be done at power off condition.



**CAUTION**

Take care not to mistake direction of battery polarity.


## 2-2. Mounting/Replacing the sensor

When replacing the sensor, take care for the following points.




### CAUTION

- After replacement of the sensor, be sure to perform the sensor calibration. If not, the reading may be deviated.
- If the unit is not used for a long period, be sure to perform the sensor calibration before use.
- Replace the sensor if you can no longer perform AIR calibration or when the reading is unstable.
- Sensor replacement shall be done at power off condition.

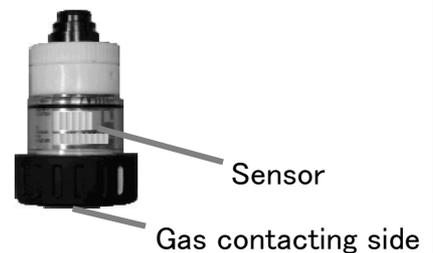

### [Replacing the sensor]

- 1) Verify that the unit is off.
- 2) Turn the rubber guard on the sensor retainer counterclockwise until yellow line on the rubber guard will indicate the proper amount of rotation by lining up with a yellow line on the instrument body that indicates "UNLOCK".
- 3) Pull the sensor retainer away from the instrument body.
- 4) Pull the old sensor out from the sensor retainer.
- 5) Replace the sensor with new one. In this case, match up the concave part of sensor connector with the convex part of sensor mounting.
- 6) Align the yellow line on the sensor retainer's rubber guard with the "UNLOCK" line on the case, insert it deeply and turn the rubber guard to the "LOCK" line.

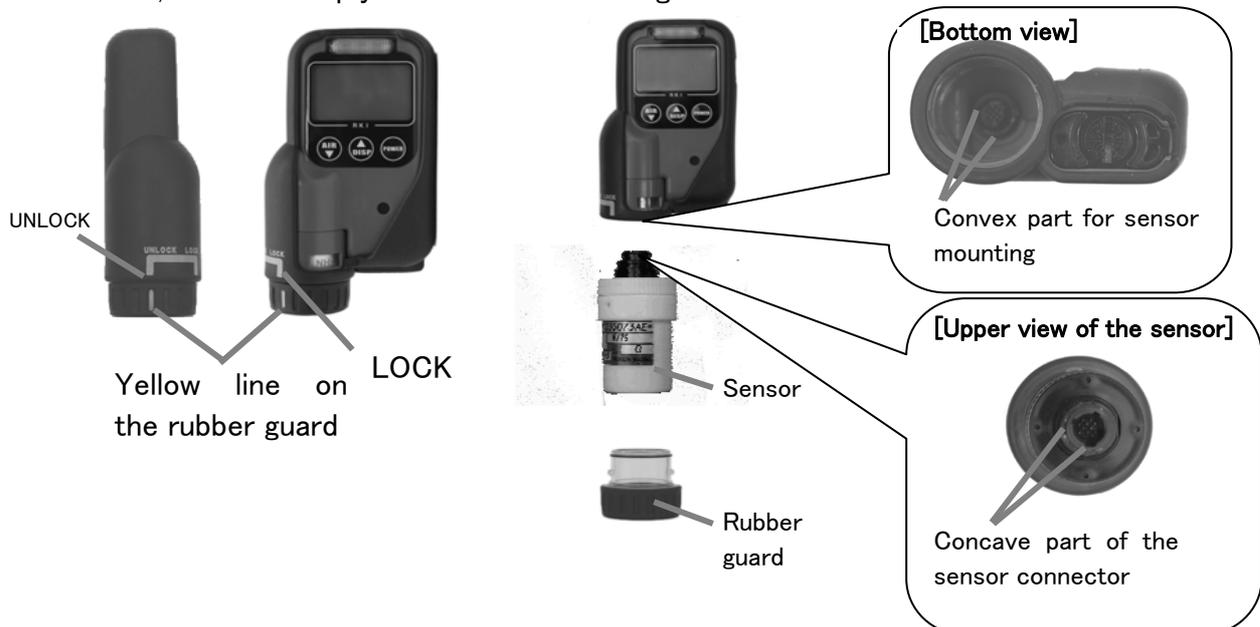

### 2-3. Power ON/OFF


Press and briefly hold the POWER button for about one second to turn on the OX-07.

**\* NOTE**  
Press and hold the POWER button until you hear a beep.

**! DANGER**  
Be sure to perform a fresh AIR adjustment before using the OX-07. (See section 3-2)




In any mode, the power is turned off by pressing and holding the POWER button for about 3 seconds.

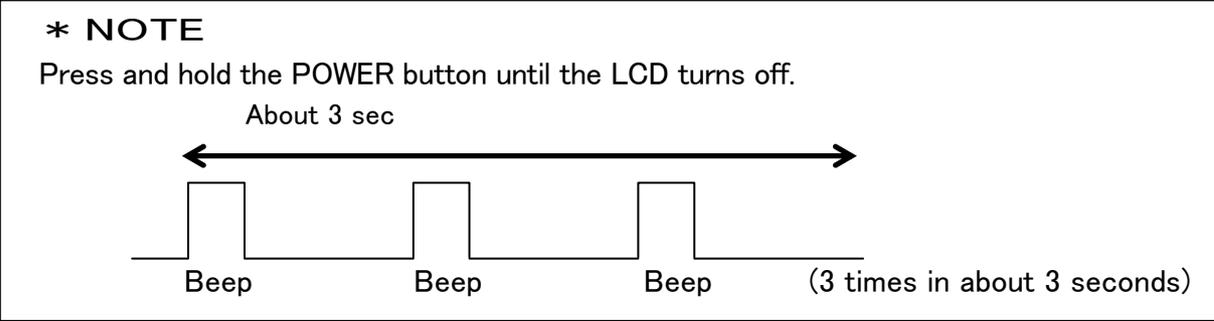

### 3. OPERATION

#### 3-1. Start-up procedure

When the OX-07 is turned on, it enters measuring mode automatically. The concentration of the target gas is displayed on the LCD.

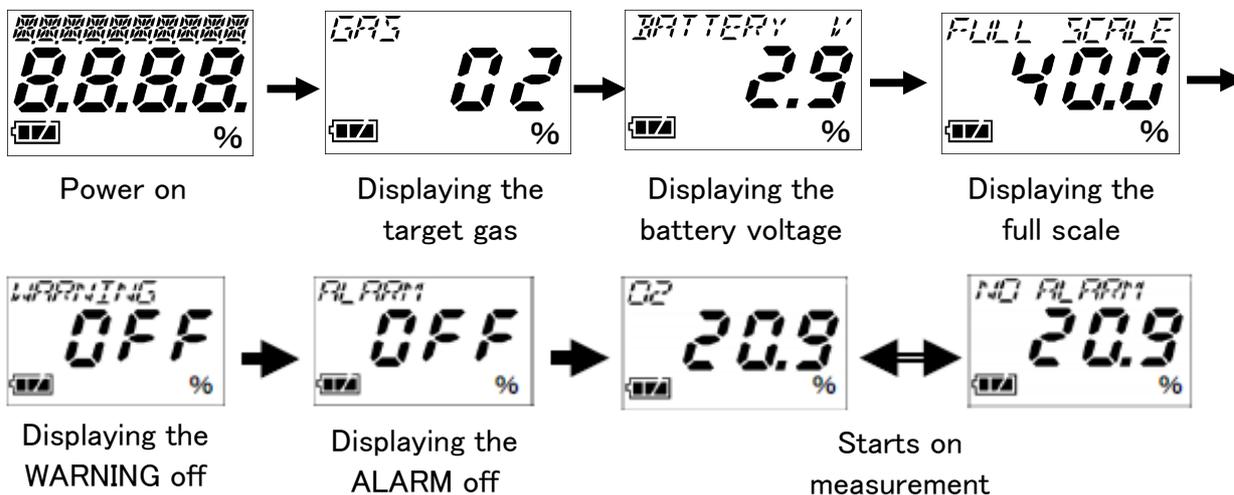


#### \* NOTE

- After start up, a 「Name of target gas + gas reading」 screen and 「NO ALARM + gas reading」screen are displayed alternately. This shows that the unit does not activate gas alarm even if gas reading has decreased.
- The operating temperature range of this unit is  $-20$  to  $+50$ degreeC. However, oxygen concentration reading may fluctuate if the ambient temperature changes suddenly.

#### 3-2. Performing a fresh air adjustment

Before using the OX-07, set the fresh air reading. Performing this adjustment ensures accurate gas readings in the monitoring environment.

- 1) Find a fresh air environment, an environment of normal oxygen content is 20.9%.
- 2) With the unit on and in measuring mode, press and hold the AIR button. The LCD displays “hold” prompting you to hold the AIR button.
- 3) After a moment, the LCD indicates “Adj”. Continue to hold the AIR button.
- 4) Release the AIR button when the LCD displays “RELEASE” in the upper left corner.
- 5) About 2 seconds later, the LCD indicates “FINISH” in the upper left corner and returns to measuring mode, showing that the fresh air adjustment has been completed automatically.

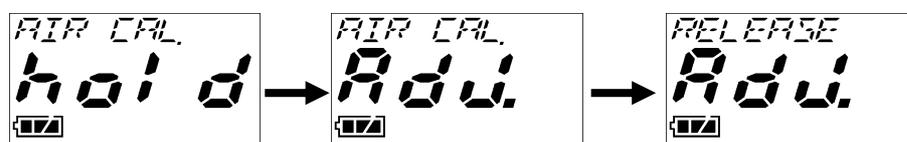

Continue to hold the AIR button

Release the AIR button



**\* NOTE**

- When AIR adjustment error is issued, the LCD displays “AIR CAL FAIL”. Release the air cal failure alarm according to the following steps.
  - 1) Press and hold “AIR” button for about 3 seconds.
  - 2) Release the “AIR” button when the LCD displays “RELEASE” in the upper left corner.
  - 3) About 5 seconds later, AIR CAL(Air adjustment) is cancelled, the LCD displays “FINISH” and indicates the concentration before the adjustment.



Continue to hold the AIR button


Release the AIR button

**! DANGER**

Perform air adjustment in the fresh air atmosphere under the similar pressure, temperature and humidity conditions to the operating environment. If the air adjustment is done at detection place (where oxygen deficiency may occur), the correct gas detection cannot be performed and oxygen deficiency accident may take place.

**3-3. Changing the display in measuring mode**

You can change the display mode by pressing the “DISP” button in measuring mode as follows:

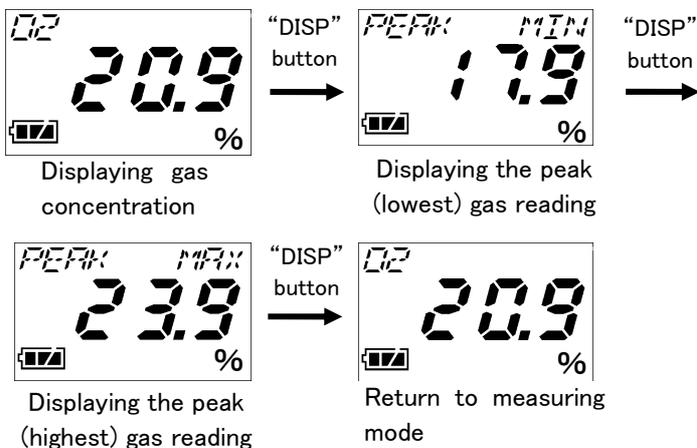

Displaying gas concentration

Displaying the peak (lowest) gas reading

Displaying the peak (highest) gas reading

Return to measuring mode








### WARNING

- Do not use the unit by pointing the gas detecting face of the sensor upward for a long time. Correct measurement may not be performed.
- Do not use or store the unit in high temperature, high humidity or high pressurized condition exceeding the operating conditions specified in the specifications. Correct measurement may not be performed.

### \* NOTE

About minus sign

- If the gas reading in measuring mode falls more than 2% of full scale below zero, the LCD displays “-“ (minus sign) in front of the single figures of LCD.

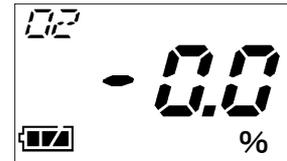

Displays minus sign

## 3-4. Wearing the unit

The unit can be used by attaching the standard alligator clip or optional belt clip.




### WARNING

Ensure that sensor is exposed to ambient air. If not, correct detection cannot be performed and it may be linked to an accident.


### [Mounting be alligator clip]

- 1) Screw down the adaptor for alligator clip on the back of the case (2 points)
- 2) Fix the alligator to the adaptor with 2 screws.
- 3) Adjust the direction of alligator clip with the teeth in the alligator clip's jaws opened.

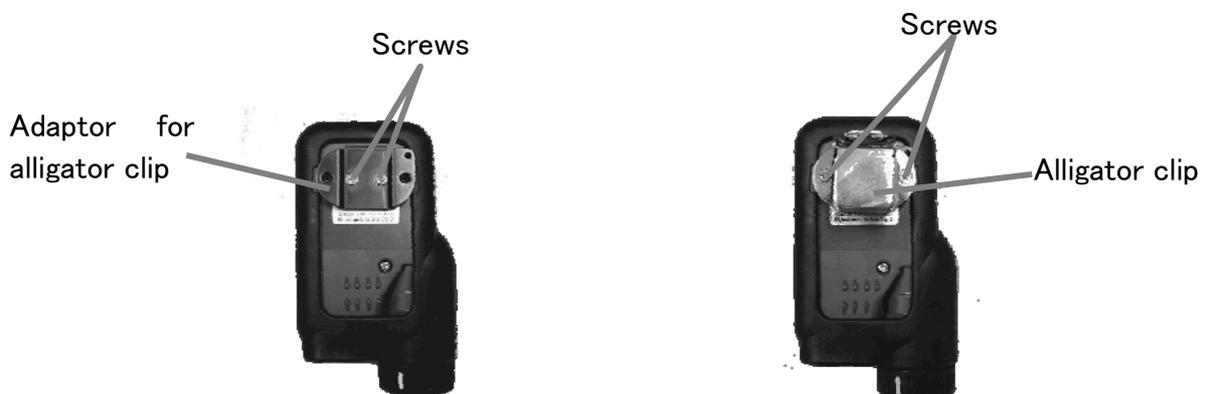

**[Mounting the belt clip]**


Screw down the belt clip on the back of the case (2 points).

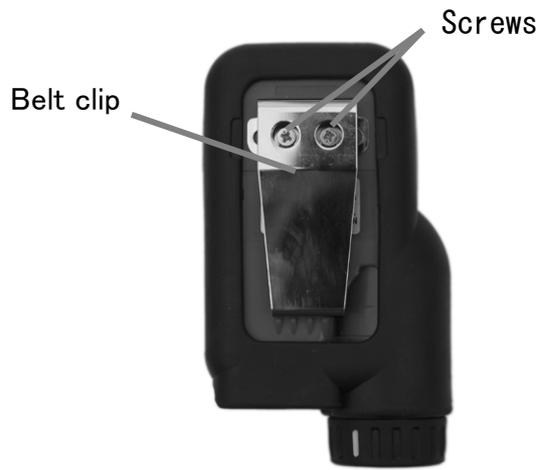

## 4. ALARMS


### 4-1. Trouble alarms

#### System failure

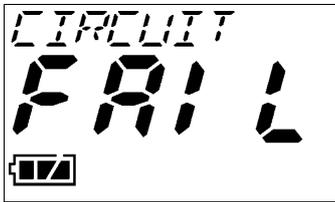

- Buzzer sounds
- Alarm light flashes
- Gas reading replaced by CIRCUIT FAIL
- Back light turns on

#### Sensor failure

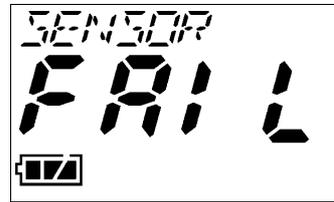


- Buzzer sounds
- Alarm light flashes
- Gas reading replaced by SENSOR FAIL
- Back light turns on

#### \* NOTE

- Sensor failure may be activated at the time of AIR cal. To reset an alarm, press "POWER" button. In this case, AIR cal is not performed.
- If the sensor failure would be activated except for system failure, low battery alarm or at the time of AIR cal. Only power off operation can be performed. When sensor failure or system failure has been occurred, turn off the power and contact our authorized agent.

### 4-2. Responding to dead battery alarm

#### Dead battery alarm

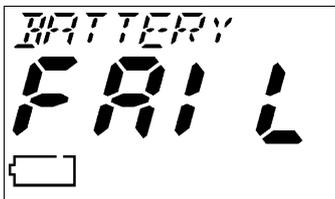

- Buzzer sounds
- Alarm light flashes
- Battery icon flashes
- Gas reading replaced by BATTERY FAIL
- Back light turns on

#### \* NOTE

The standard of the bar in battery icon is as follows

-  : Enough remaining
-  : Battery capacity has been decreased.
-  : Change the battery as soon as possible

#### WARNING

The unit is not operational as a gas monitor. Change the battery as soon as possible when a low battery warning occurs.

### 4-3. Resetting alarms

To reset a trouble alarm, press and release the “POWER” button.

Alarms to be able to reset


- Calibration failure
- Clock failure when you turn on the unit

Alarms unable to reset

Following alarms cannot be reset unless you turn off the unit

- System failure
- Dead battery alarm
- Sensor failure

### 4-4. Examples of other LCD indications

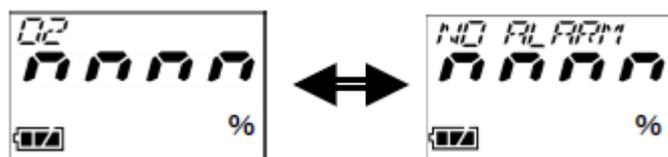

Over range

#### \* NOTE

- If the gas reading rises above full scale of the OX-07, the unit switches to over range screen.
- In over range condition, the unit indicates 「Name of target gas + blinking brackets」 screen and 「NO ALARM + blinking brackets」 screen alternately and it does not activate an over range alarm even if oxygen reading reaches over range condition.

### 4-5. Responding to low oxygen content

Sudden release of gas will exceed the safety level and reach to dangerous level within a short time. If the oxygen content has decreased, leave from that area immediately and ventilate there. Also, stop the leaking source immediately, if the gas leak is identified.



#### DANGER

- If oxygen content has decreased, ventilate with fresh air or escape to the fresh atmosphere immediately.
- This unit (OX-07, Type B version) has no gas alarm function.  
Take care about decreasing oxygen condition.

## 5. MAINTENANCE AND CHECK

Perform following checks to maintain the reliability and correct functions.



### **WARNING**

If you find abnormality to this unit, contact our authorized agent.

#### **5-1. Daily check**

Check that unit housing, display, switches and lights are not dirty or damaged. Also check battery voltage, actions of buzzer, lights and vibration when turning power on.

#### **5-2. AIR calibration (Fresh air adjustment)**

Perform AIR calibration after power on. Also perform AIR calibration in fresh atmosphere if O<sub>2</sub> reading is not 20.9%. (See section 3-2)

#### **5-3. Replacing batteries**

Replace the battery if battery voltage decreases during operation. (See section 2-1)

#### **5-4. Gas calibration**

It is required to perform gas calibration at minimum every 6 months. To calibrate the unit, you will need the calibration kit. Ask our authorized agent for gas calibration kit.

## 6. SCRAP THE PRODUCT

As a harmful substance or materials for environment are not used in this unit itself, treat it as industrial waste (Non-flammable material) according to the local rule. Regarding the oxygen sensor, contact our nearest agent or RIKEN KEIKI CO., LTD.

## 7. TROUBLESHOOTING

Symptoms	Probable causes	Recommended action
The unit will not turn on	Batteries may need to be replaced	Refer to section <2-1 Mounting /replacing the batteries>
	Battery polarity may be wrong	
	Holding time for POWER button may be too short	Press and hold POWER button for about 1 sec until it shows display.
	Battery cover may be loose	Verify that the battery cover is attached.
“CIRCUIT FAIL” is displayed on the LCD	A circuit failure has occurred.	Contact our nearest agent to repair.
“SENSOR FAIL” is displayed on the LCD	The O2 sensor may need replacement	Replace the sensor with new one.
“SENSOR FAIL” displays during fresh air adjustment	Fresh air is not supplied to the unit	Supply fresh air.
	The O2 sensor may need replacement	Replace the sensor with new one.
“FAIL (battery icon)” is displayed on the LCD	Decrease of battery voltage.	Turn off the unit and replace batteries with new ones at non-hazardous area.

## 8. SPECIFICATIONS

### 8-1. Specifications

Model	OX-07
Type	Type B
Measurable gas	Oxygen (O <sub>2</sub> )
Detection principle	Galvanic cell
Measuring range (Resolution)	0-40.0%vol (0.1%vol)
Preset alarm level	WARNING : OFF ALARM : OFF OVER range : 40.0%vol
Trouble alarm	Sensor disconnection, low battery, circuit failure, calibration range error
Alarm indication	Trouble alarm : Alarm light flashes, pulsing tone, displaying trouble contents (no vibration)
Detection method	Diffusion sampling
Display	Digital LCD
Power source	AA size alkaline batteries (2 pcs)
Continuous operation	Up to 5000 hours (at 25degreeC, no alarm, no backlight)
Explosion proof	Japanese specification : Exia II CT3X (TIIS<Japan>) Overseas specification : II 1GExia II CT4Ga (ATEX/IECEX<KEMA>)
Operation temperature and humidity	-20degreeC to +50degreeC, below 95%R.H. (non-condensing)
Function	•Manual backlight LCD (automatically lit during alarm) •PEAK hold function (lowest reading and highest reading) •Dead battery alarm and over range indication.
Dimension and weight	Approx. 66(W) x 114(H) x 33(D)mm, Approx. 230g (with battery and rubber protector)

### 8-2. Standard accessories

- AA size alkaline batteries 2pcs (built-in the unit)
- Rubber protector
- Alligator clip (with adaptor 1pce/screws 4pcs)
- Hand strap
- Operation manual

### 8-3. Optional accessories

- Belt clip (with 2 screws)
- Extension cable (5m, 10m, 20m, 30m)
- Carrying case




Belt clip



Extension cable

#### [Using the OX-07 with extension cable]

- 1) Verify that the OX-07 is off.
- 2) Take out the sensor from the instrument body.
- 3) Mount the removed sensor to the sensor retainer with the same procedures as sensor mounting. (See section 2-2.)
- 4) Mount the cable retainer to the instrument body as shown below figure, and align the yellow line with "LOCK" line.

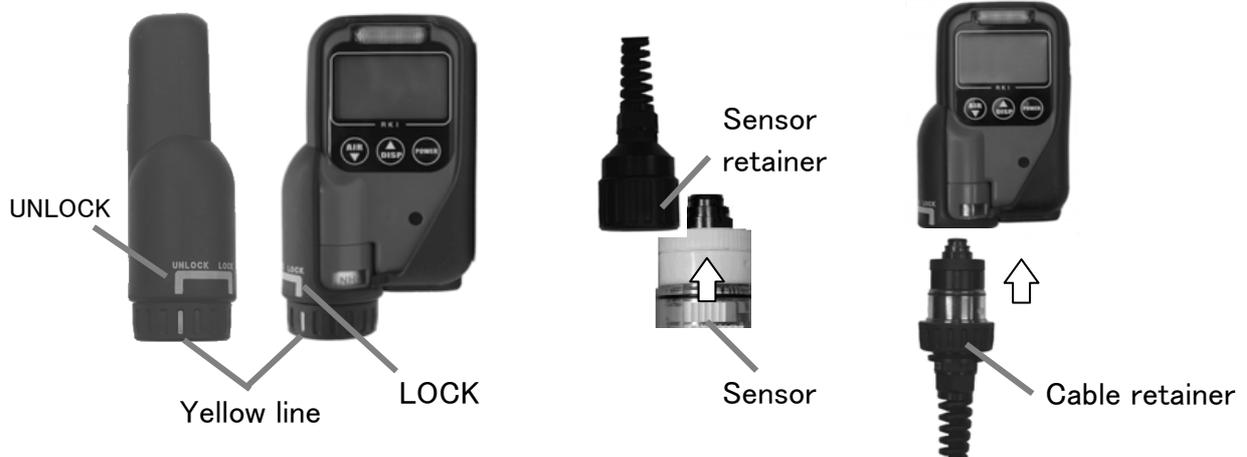

#### CAUTION

- When using the OX-07 with extension cable, do not throw sensor part into detection point, but lower down slowly. Avoid impact to the sensor. Sensor may be damaged.
- When intending to measure the oxygen content in manhole, inside device, etc by OX-07 with extension cable, adjust the temperature of the sensor to be the same temperature as measuring point by leaving it there about 10 minutes. Then, pull it up to the ground once, turn on the unit again and perform the fresh air adjustment. After that, lower the sensor down to the detection point and measure oxygen content.

## 9. DEFINITION OF TERMS

### %vol

Gas concentration represented by the unit as a percentage of the total volume.

### Calibration

By using calibration gas, adjust the displayed gas concentration to match the calibration gas concentration.

### PEAK

 
This is a peak (highest or lowest) gas reading since the last time the unit was turned on.

### Maintenance and check

Work and inspection to maintain the performance of this unit.

## 10. DETECTION PRINCIPLE

By connecting a noble metal and lead immersed in an electrolyte with a lead wire, an electrochemical cell (galvanic cell) is made. A membrane covers the cell and allows oxygen to diffuse into the electrolyte where reduction on the metal electrode and oxidation on the lead electrode occur respectively as shown in the following chemical equation ;



The oxygen reacts in the cell as above equation and produce a current proportional to the oxygen concentration. The current develops a voltage across a thermister/resistor network. If oxygen concentration decreases, reduction on noble metal electrode decreases and voltage on both sides of thermister also decreases.

[Structure]

