

User Air Calibration

A simple user visual inspection should be carried out, ideally, every day with an Air Calibration necessary only when not reading 20.9%vol. Ensure no other gases are present before doing the Air Calibration. Refer to the manual for further information about this and other regular checks.

